



# DØRKLOKKE 100 - BASIC

## - trådløs



I denne manual beskrives produktet, og vi anbefaler Dem at læse denne grundigt igennem, så korrekt anvendelse sikres. Manualen bør opbevares så længe produktet er i brug.


### QUICKGUIDE - KOM HURTIGT I GANG:

- Isæt batterier i modtager (dørklokke).
  - Fjern batteristrip ved batteriet i dørtrykket.
  - Tryk 1 gang på dørtrykket og sættet kodes automatisk. Koden kan ændres - se separat afsnit „Kodning“
  - Test før endelig montering.
- For yderligere information, læs efterfølgende brugsanvisning.

### PAKKEN INDEHOLDER:

- Dørtryk som anbringes ved døren
- Dørklokke (modtager) som anbringes i boligen
- 1 stk. batteri CR2032 (monteret i dørtrykket)
- Fittings
- Manual dansk/engelsk

### PRODUKTSPECIFIKATION:

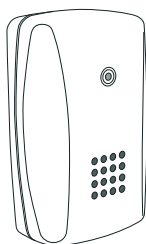


Dørklokke  
(modtager)



Dørtryk  
(sender)



S-knap til  
skift af ringetone

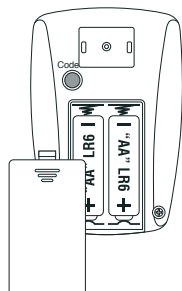

„CODE“ -knap  
Ændring/tilføjelse af  
kode

Bagside af dørklokke - åbent  
batterirum

### FUNKTION:

Når dørtrykket aktiveres vil den lille LED lampe lyse i ca. 1 sekund og trådløst signal sendes til dørklokken, som vil ringe. Lyden stopper når den valgte ringetone er gennemført. (se afsnittet „valg af ringetone“). Tryk igen for gentagelse. Holdes knappen nede, gentages lyden ikke! LED på dørklok-kens front vil lyse ca. 5 sekunder når signal modtages og dørklokken aktiveres.

**Bemærk!** Rækkevidden kan begrænses af vægge og andre lokale forhold. (Se også afsnittet „Rækkevidde“).

### MONTERING AF BATTERIER - DØRTRYK:

- Fjern bagpladen ved at tappe i bunden trykkes forsigtigt ind. Brug evt. en flad skruetrækker.
- Bagpladen monteres nu på dørkarmen med 2 skruer eller dobbeltklæbende tape.
- 1 x 3 Volt litium knapcelle CR2032 batteri er isat. Fjern plaststrip som er fastklemt ved batteriet.
- Klik fronten på den fastmonterede bagplade.

**Bemærk** - Rækkevidden reduceres væsentligt hvis dørtryk- ket monteres på en metal/aluminium overflade.

**VIGTIGT!** Se desuden afsnit vedr. „Kodning“.

### MONTERING AF BATTERIER - DØRKLOKKE:

- Fjern batteridækslet ved at trykke det forsigtigt nedad.
- Sæt 2 stk. 1,5v alkaline, type LR6 („AA“) batterier i (med- følger ikke). Bemærk korrekt placering i forhold til + og - poler.
- Monter dæksel igen

### IBRUGTAGEN/DRIFT:

Tryk én gang på dørtrykket og dette vil sende signal til dør- klokken, som vil afgive akustisk signal.

Dørklokken er klar til brug og kan både anvendes hængende på et søm i væggen, som transportabel dørklokke rundt om- kring i huset eller stående på en flad overflade.

**Bemærk!** Hvis dørklokken ringer umotiveret kan koden ændres således at den ikke forstyrres af udefra kommende signaler. Se afsnittet „Kodning“.

### SKIFT AF BATTERI:

Se afsnittene „Montering af batterier“.

### VALG AF RINGETONE:

Der kan vælges mellem 8 forskellige ringetoner. Skift mel- lem disse foretages ved et LET tryk på omskifteren „S“ som findes i dørtrykkets batterirum.

Denne funktion gør det muligt at vælge forskellige ringetoner til f.eks bag- og fordør.

Ringetoner:

- |                |                         |
|----------------|-------------------------|
| 1. Westminster | 5. „Banjo on my nee“    |
| 2. Ding Dong   | 6. „Twinkle - Twinkle“  |
| 3. Telefon     | 7. „It's a small world“ |
| 4. Cirkus      | 8. Gøende hund          |

### KODNING:

Dørklokken kodes automatisk når dørtrykket aktiveres første gang. Hvis klokken ringer utilsigtet eller slet ikke, bør koden ændres - følg proceduren nøje:

Varenr: 32930  
DB nr.: 2007967  
EAN: 5703901019373



# DØRKLOKKE 100 - BASIC

## - trådløs



- Fjern batterierne i BÅDE dørtryk og dørklokke i ca. 15 sek. - herved "nulstilles" kodningen
- Monter igen batterier i både dørklokke og dørtryk. Dørtrykket genererer en ny tilfældig kode som sendes til dørklokken ved 1. aktivering (tryk)
- Tryk 1 gang på dørtrykket og dørklokken vil ringe for at bekræfte den ny kode.

### KODNING - FLERE DØRTRYK TIL SAMME DØRKLOKKE:

Tryk og hold knappen „code setting“ på bagsiden af dørklokken inde i 1-2 sekunder. Dørklokken vil give et bip for at angive at den er klar til at modtage endnu en kode fra det ekstra dørtryk. Herefter (inden 5 sekunder) aktivres det ekstra dørtryk og dørklokken kvitterer med et bip som indikation på at koden fra dørtrykket er lagret. Der kan anvendes op til 4 dørtryk til samme dørklokke.

Husk at gentage proceduren ved hvert batteriskift, eller hvis klokken ringer utilsigtet.

### RESET AT KODE:

Fjern alle batterier i både dørtryk og dørklokke og gentag proceduren beskrevet i afsnittet „Kodning“

### RÆKKEVIDDE:

Bemærk at rækkevidden på op til 50 meter kan begrænses af bl.a. metal, mure og andet elektronisk udstyr. Rækkevidden kan forlænges ved at indsætte en „Repeater/forlænger“ model 32980

### GODKENDELSE:



### BORTSKAFFELSE:

Elektrisk og elektronisk udstyr indeholder materialer, komponenter og stoffer, der kan være skadelige for menneskers sundhed og for miljøet, hvis affaldet ikke håndteres korrekt. Elektrisk og elektronisk udstyr er mærket med nedenstående overkrydsede skraldespand.

Den symboliserer, at elektrisk og elektronisk udstyr ikke må bortskaffes sammen med usorteret husholdningsaffald, men skal indsamles særskilt. Kontakt den lokale genbrugsstation og følg deres anvisninger.



### VEDLIGEHOLDELSE:

Dørklokken bør rengøres regelmæssigt. Den kan aftørres med en blød klud. Må ikke overmales eller udsættes for vand. Test dørklokken efter rengøring.

### HJÆLP TIL PRODUKTET:

- Klokken (modtageren) er kun til indendørs brug
- Moner ikke dørtrykket på metal/aluminiumsoverflade, da det vil reducere rækkevidden væsentligt
- Udsæt ikke dørklokken eller dørtrykket for direkte vand
- Udsæt ikke dørklokken eller dørtrykket for høje eller meget lave temperaturer
- Brug kun ALKALINE batterier for optimal rækkevidde/levetid. Undgå desuden at mixe brugte og nye batterier.
- Tag batterierne ud hvis produktet ikke anvendes i længere tid

### PROBLEMLØSNING:

Hvis klokken ikke ringer når der trykkes på dørtrykket:

1. Afstand mellem dørtryk og dørklokken er for stor.
  2. Dørtrykket og dørklokken er ikke kodet ens.
  3. Batteri er fladt i dørtryk eller dørklokke
- Løsning: Ad1. Ryk enhederne tættere sammen.  
Ad2. Tjek at kodningen er ens.  
Ad3. Udskift batterier.

### TEKNISKE SPECIFIKATIONER :

Batteri :

- Dørklokke: 2 X 1,5V alkaline LR6 - AA (medfølger ikke)

- Dørtryk: 1 x CR2032 (medfølger)

Rækkevidde: Op til 50 meter

Ringetoner: 8 elektroniske

Koder: 256 - tildeles automatisk

Volumen: 80 dB

Omgivelses

temperatur:

- Dørklokke: +15 ° - +35 ° C

- Dørtryk: -10 ° - +35 ° C

Tilbehør: Forlæng rækkevidden med repeater/forlænger model 32980

### GARANTI:

Der ydes 2 års garanti på produktet regnet fra købsdatoen. Garantien er kun gyldig mod forevisning af original købskvittering.

Garanti dækker reparation af produktet i garanti-perioden forudsat at produktet er anvendt og vedligeholdt som beskrevet i manualen. Alle erstattede dele tilfalder L-Team. Udskiftning og reparation forlænger ikke garantiperioden. Garantien bortfalder ved modificering eller forsøg på reparation af produktet. Garantien dækker ikke fragtomkostninger og force majeure som f.eks. utilsigtet strømafbrydelse.

www.L-Team.dk

01.08.2018

Varenr: 32930  
DB nr.: 2007967  
EAN: 5703901019373

Fra Roliba®



# DOOR BELL 100 - BASIC

- wireless




*This instruction manual explains the product and we advise you to read this carefully so that proper use is ensured. It is important to install this product in accordance with the fitting instructions below. Failure to do so may render your guarantee void. The instruction manual should be kept as long as the Door bell is in use.*

## CONTENTS:

- Bell push
- Door bell (receiver)
- 1 pcs. battery CR2032 (supplied in the bell push)
- Fittings
- Manual instruction Danish / English

## PRODUCT SPECIFICATION:

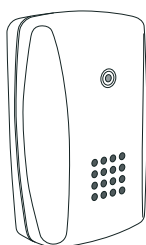


Door bell  
(receiver)



Bell push  
(transmitter)



S-button for ring-  
tone selection

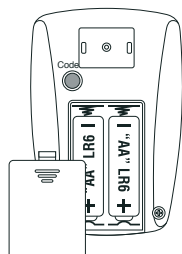

„CODE“ -button  
change or adding of  
code

Back of the door bell

## FUNCTION:

When the bell push is activated, the small LED light will light up for approximate 1 second and a wireless signal is sent to the doorbell, which will call. The sound stops when the selected ringtone is completed. (See section “Ringtone selection”). Press again for repeat. Holding down the bell push does not repeat the sound! The LED on the doorbell’s front will illuminate approximate 5 seconds when signal is received and the door bell is activated.

**Note!** The transmission range will be reduced if mounting the bell push on metal or UPVC door frames. The transmission range can be reduced if the signal is transmitted through a number of walls or ceilings.

## BATTERY INSTALLATION: BELL PUSH

- The bell push unit is operated by 1 x 3volt Lithium battery (CR2032 - included)
- The Lithium battery (CR2032) has been installed. Open up the bell push and remove the isolation strip from the battery compartment then it is ready to use.

### Replace the battery.

Use a small flat screwdriver to lift up the battery from the battery compartment. Replace it by 1 x 3 volt CR2032 Lithium battery, ensuring the battery polarity match the internal markings (“+” face upward), then press the battery down so that it is sitting firmly in its compartment. Snap the back cover of bell push back on.

**Note!** The transmission range will be reduced if mounting the bell push on metal or UPVC door frames. The transmission range can be reduced if the signal is transmitted through a number of walls or ceilings.

**Remark!** For code setting - see “Digital Code Set Up” section.

## BATTERY INSTALLATION: DOOR BELL

- Remove the battery cover and insert 2 x 1.5v batteries (AA, UM3 & LR6 – not included); ensure battery polarity match the internal markings.

The door chime is now ready to learn the operation code (Please see Digital Code Set Up).

## OPERATING THE DOOR BELL:

Press the button on the bell push unit once and it sends a wireless signal to the door bell. The door bell will sound and the LED Light will light up. The sound will stop as soon as the melody ends and LED light will light up for about 5 seconds. For repeating sound, press the button again. Holding the button in will NOT repeat the sound.

The door bell is ready for use and can be used both hanging on a wall seam, like a portable door bell around the house or standing on a flat surface.

**Note!** If the door bell activates unmotivated, the code can be changed to avoid disturbance from external signals. See section “Digital Code Set Up”.

## REPLACE BATTERY:

See sections “Battery Installation”

## RINGTONE SELECTION:

The melody selector is located inside the bell push unit, a small switch on the top right corner of battery compartment marked with “S”. Press the switch once, the ringtone will change to play the next one on the list, there are total of 8 melodies for selection. The ringtone is preset to play “Westminster”.

Item no.: 32930  
DB no. 2007967  
Barcode: 5703901019373

**Roliba**®



# DOOR BELL 100 - BASIC

- wireless



## Ringtones:

- |                      |                         |
|----------------------|-------------------------|
| 1. Westminster chime | 5. „Banjo on my nee“    |
| 2. Ding Dong repeat  | 6. „Twinkle - Twinkle“  |
| 3. Telephone ring    | 7. „It's a small world“ |
| 4. Circus theme      | 8. Barking Dog          |

## DIGITAL CODE SET UP :

The Door Chime kit is equipped with advanced random and self-learning operation code ability.

### One Bell Push:

After batteries are installed in to both bell push and door bell units, press the bell push once to generate a new operation code. The Door bell will sound to indicate that a new operation code is registered and memorized.

### Two or more Bell Pushes:

Press and hold the code setting button (on the back of the door bell unit) for about 1-2 second, the door bell unit will give a “beep” sound to indicate that it is ready for the new code registration. Press the 2nd bell push once (within 5 seconds) to generate a new operation code randomly and send a wireless signal to the door bell unit which will sound to indicate that a second operation code is also registered and memorized.

Repeat the same procedure for 3rd and 4th bell pushes of same series transmitter.

### Remark:

- Repeat this procedure after the door bell or the bell push batteries have been changed.
- If the door bell sounds for no reason during the digital code setting, it means that it has been interfered by other similar chime unit nearby, re-set the digital code immediately.
- The door bell unit can store up to 4 sets of operating code from the same series transmitter.

## RESET OF CODE:

Remove all batteries from both door bell and bell push and repeat „digital code set up“ mentioned in above section.

## OPERATING DISTANCE:

The transmission range of up to 50 meters will be reduced if mounting the bell push on metal or UPVC door frames. The transmission range can be reduced if the signal is transmitted through a number of walls or ceilings.

To increase the range insert repeater model no. 32980.

## APPROVALS:



## RECYCLING:

Do not discard the unit with household waste, but in compliance with currently enforced regulations. In compliance with the Directive 2002/96/CE relative to waste from electrical and electronic equipment (WEEE) this product must be recycled.



## IMPORTANT:

- Do not mount the bell push onto any metal surfaces or UPVC door frame, as this will reduce the operation range seriously.
- Do not mount either unit close to fireplace or expose to high temperature.
- Do not use different type of batteries, or mix up old and new batteries.
- Batteries should be inserted and removed by an adult only.
- Always use alkaline batteries. Please dispose of old, defective batteries in an environmentally friendly manner in accordance with the relevant legislation.
- Make sure that no naked flame sources, such as lighted candles, should be placed on the unit.
- The unit should not be exposed to dripping or splashing and no objects filled with liquids, such as vases, should be placed on the unit.
- **CAUTION:** Make sure batteries are installed correctly as per the internal markings.
- **CAUTION:** Replace only with the same or equivalent type of battery that is recommended by the manufacturer.
- **CAUTION:** Danger of explosion if battery is incorrectly installed or replaced.
- **IMPORTANT:** There are no serviceable parts in the units, do not attempt to repair it.
- **NOTE:** Extreme (Hot & Cold) temperature may shorten the operating range; re-locate the chime unit if necessary.
- Note: The product function maybe reset when it is subjected to electrostatic discharges. Just follow the instruction described in this manual to set the function again for normal operation.

## USERS HINT:

If the door bell unit does not sound, please check the following:

- Flat batteries in either bell push or in door bell units
  - *Change the batteries.*
- Wrong battery polarity in either bell push or in door bell units
  - *Reinsert the batteries.*

Item no.: 32930  
DB no. 2007967  
Barcode: 5703901019373

**Roliba®**



## DOOR BELL 100 - BASIC

- wireless



- Both bell push and in door bell units are not on the same operation codes
  - *Reset the code (see digital code set up).*
- The door bell unit does not register any operation code after batteries changed
  - *reset the code (see digital code set up).*
- Units are out of range
  - *Operate the door bell unit within the operation range.*

### TECHNICAL SPECIFICATIONS :

Power :

Door bell: 2x1,5V Alkaline LR6 (not supplied)

Bell push: 1 x CR2032 (supplied)

Operating Distance: Up to 50 meter

Selectable ringtones: 8 electronic

Digital Code: 256 - random coding

Volume: 80 dB

Operating temperature:

Door bell: +15 ° – +35° C

Bell Push: -10 ° – +35° C

Accessories:

Insert extender model no. 32980 for extension of operation distance.

### WARRANTY:

A 2 year warranty is given on the product from the date of purchase. The warranty is only valid with the presentation of original purchase receipt.

The warranty covers repair of the product during the warranty period provided that the product is used and maintained as described in this manual. All replaced parts apply to L-Team. Replacement and repair does not extend the warranty period. The warranty lapses upon modification or attempted reparation of the product. The warranty does not cover freight costs and force majeure such as unintended power outage.

[www.ensonordic.com](http://www.ensonordic.com)

01.08.2018

Item no.: 32930  
DB no. 2007967  
Barcode: 5703901019373

**Roliba®**